






Remote Controller (RC-29)

Dec-08-2016

The Remote Controller is used to arm the system in home or away mode, disarm the system and send a panic signal.

● Identifying the parts

1.  **AWAY ARM BUTTON**
Press this button to arm the system in away mode.
2.  **PANIC BUTTON**
Press and hold this button for 3 seconds to send a panic signal regardless of system mode.
3.  **DISARM BUTTON**
Press this button to disarm the system. When alarm is activated, pressing this button will stop the alarm.
4.  **HOME ARM BUTTON**
Pressing this button will arm the system in home mode.

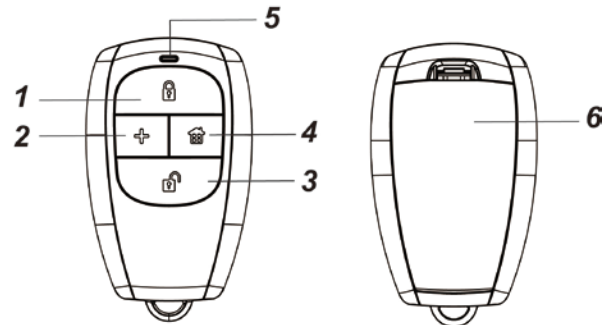

<NOTE>

- ☞ Panic alarm cannot be stopped after activation by pressing disarm button on Remote Controller.

5. LED INDICATOR

The LED will light on for 2 seconds when the Away Arm/Home Arm/Disarm button is pressed.

When the Panic Button is pressed, the LED will quickly flash 6 times.

6. BATTERY COMPARTMENT

The Remote Controller uses two **AAAA 1.5V Alkaline batteries** as its power source. The low battery status will be sent to the Control Panel along with regular signal transmission, and, the Control Panel will display the status accordingly.

<NOTE>

- ☞ When changing battery, after removing old batteries, press any button twice to fully discharge before inserting new batteries.
- ☞ When a low voltage battery is inserted, the LED will flash 3 times to indicate low battery.

● Getting Started

- Remove the battery cover and insert the batteries.
- Put the Control Panel into learning mode, refer to Control Panel manual for detail.
- Press any buttons on the Remote Controller.
- If the Control Panel receives the Remote Controller signal successfully, it will display the information accordingly.
- Please refer to your Control Panel manual to complete the learning process